


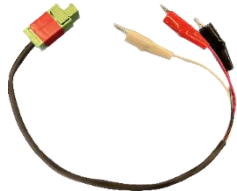

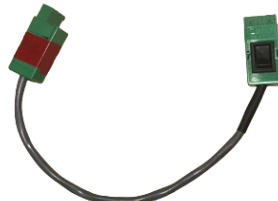



The following cables are required to configure any of our TD Transmitters:

Component	Name
 ①	Wall Plug-in Adapter
 ②	SV Bus Converter
 ③	USB Converter Cable


Component	Name
 ④	Transmitter Adapter Cable
 ⑤	SV Bus Adapter Cable
 ⑥	FINCH II Programming Adapter for Transmitter

### How to Connect Cables

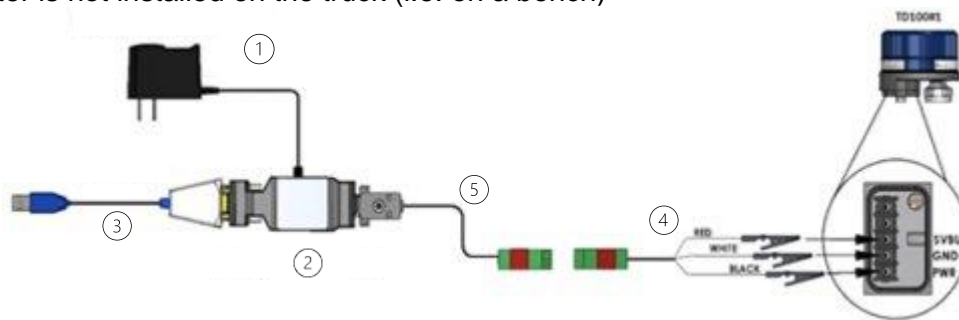

When the transmitter is not installed on the truck (i.e. on a bench)



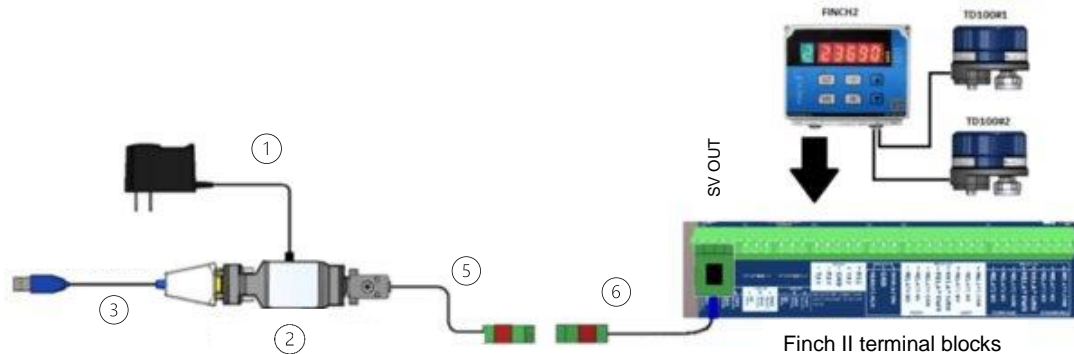

When the transmitter is installed on a truck and programming it through the FINCH II (first two transmitters only)




The following cables are required to update the configuration settings for any of our FINCH II display versions:

Component	Name
 <p>①</p>	Wall Plug-in Adapter
 <p>②</p>	FINCH II Power Plug Adapter

Component	Name
 <p>③</p>	USB Converter Cable
 <p>④</p>	FINCH II Programming Adapter

### How to Connect Cables

When unhooking the FINCH II door from the unit and using the wall adapter for power.

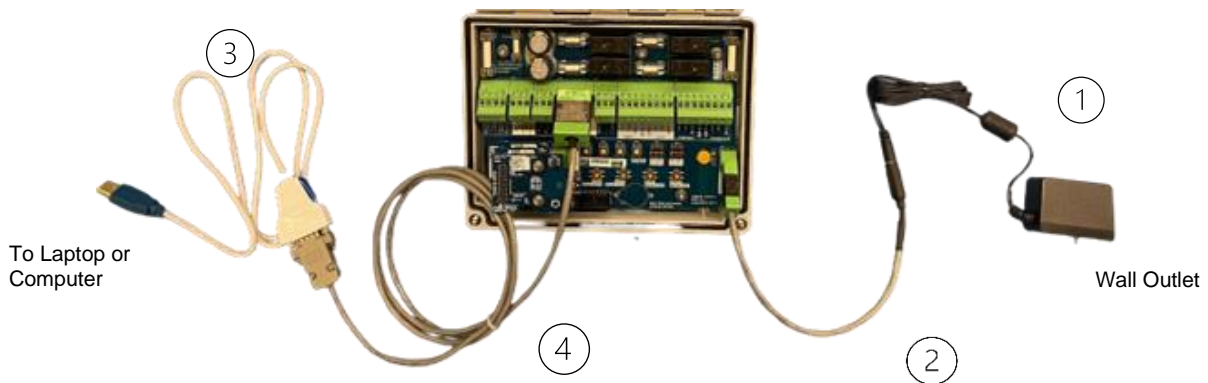

When keeping the FINCH II display on the truck and using the vehicle battery power.

